



The best selling safety eyewear in the world is now part of a multi-solution family of products offering the best in comfort, protection and style. Built with MMT— Multi-Material Technology® and a high level of adjustability, each member of the Uvex Genesis Family delivers a broad range of superior product benefits. From the classic good looks of the original Genesis to the aggressive sports styling of the Genesis X2™, to the specialized Genesis® Reading Magnifiers, there is never a need to compromise safety for style with the Uvex Genesis Family of safety eyewear.

SAFETY EYEWEAR

Genesis® Family

UVEEX™

by Honeywell

Genesis®

Engineered for comfort, protection and style, Genesis is the number one selling premium eyewear in the market, delivering an incredible range of superior product benefits. Built with MMT— Multi-Material Technology® and a high level of adjustability, Genesis provides workers with extraordinary all-day comfort and raises the bar on compliance.



Three position ratchet lens inclination adjusts to complete the fitting system and provides unsurpassed extended wear comfort.



Soft, flexible nose fingers conform to fit a variety of nasal profiles.

High Performance Protection

- Wrap-around 9-base uni-lens style for uncompromised peripheral vision and superior coverage.
- Available with Dura-streme™ dual coating technology which combines our two best lens coatings — Uvextreme® anti-fog on the interior and Ultra-dura® anti-scratch on the exterior — for 3x longer lens life.*
- Offers highest available impact protection. Meets ANSI Z87.1-2003 (High Impact) and military V₀ ballistic impact test (protection against impact energies 7x higher than ANSI requirements).
- Certified to meet CSA Z94.3 standards.
- Available in a wide range of lens tints to address the needs of virtually any work environment.



A unique ventilation channel, between the frame and lens, vents the eye socket area to deliver an outstanding level of moisture and fog control.



Adjustable temple length enables wearers to custom fit the eyewear to their facial profile.

Superior Comfort & Fit

- Soft elastomer browguard diffuses and deflects impact while providing comfort at all contact points.
- Soft flexible fingers on the nose piece adjust and conform to almost any nasal profile to reduce slippage.
- Adjustable temple length and lens inclination for a customizable fit.

Product Platform Advantages & Value

- Economical and easy lens replacement system allows for multiple lens tints and extends the life of the eyewear.
- Multiple models in a family offers standardization while offering workers choice.
- Lifetime frame guarantee.

EYEWEAR

ITEM #	FRAME COLOR	LENS TINT	LENS COATING	UPC CODE
S3200	Black	Clear	Ultra-dura	603390087851
S3200D	Black	Clear	Dura-streme	603390122859
S3200-ADV	Black	Clear	Ultra-dura	603390123405
S3200X	Black	Clear	Uvextreme	603390087868
S3200X-ADV	Black	Clear	Uvextreme	603390122965
S3201	Black	Espresso	Ultra-dura	603390087875
S3201X	Black	Espresso	Uvextreme	603390087882
S3202	Black	Amber	Ultra-dura	603390087899
S3202X	Black	Amber	Uvextreme	603390102837
S3203	Black	Gold Mirror	Ultra-dura	603390087905
S3204	Black	SCT-Reflect 50	Ultra-dura	603390087912
S3205X	Black	SCT-Gray	Uvextreme	603390095221
S3206	Black	Shade 2.0 Infra-dura	Ultra-dura	603390095115
S3207	Black	Shade 3.0 Infra-dura	Ultra-dura	603390095122
S3208	Black	Shade 5.0 Infra-dura	Ultra-dura	603390095139
S3209	Black	SCT-Low IR	Ultra-dura	603390095146
S3210X	Black	SCT-Vermilion	Uvextreme	603390094989
S3211X	Black	SCT-Blue	Uvextreme	603390095009
S3212X	Black	Dark Gray	Uvextreme	603390100192
S3213X	Black	50% Gray	Uvextreme	603390106927
S3220	Earth	Clear	Ultra-dura	603390088537
S3220X	Earth	Clear	Uvextreme	603390088544
S3221	Earth	Espresso	Ultra-dura	603390088551
S3221X	Earth	Espresso	Uvextreme	603390088568
S3222	Earth	Amber	Ultra-dura	603390088575
S3223	Earth	Gold Mirror	Ultra-dura	603390088582
S3224	Earth	SCT-Reflect 50	Ultra-dura	603390088599
S3240	Vapor Blue	Clear	Ultra-dura	603390088674
S3240X	Vapor Blue	Clear	Uvextreme	603390088681
S3241	Vapor Blue	Espresso	Ultra-dura	603390088698
S3241X	Vapor Blue	Espresso	Uvextreme	603390088704
S3242	Vapor Blue	Amber	Ultra-dura	603390088711
S3243	Vapor Blue	Gold Mirror	Ultra-dura	603390088728
S3244	Vapor Blue	SCT-Reflect 50	Ultra-dura	603390088735
S3260	Patriot - Red, White, Blue	Clear	Ultra-dura	603390110979
S3260X	Patriot - Red, White, Blue	Clear	Uvextreme	603390110986
S3263	Patriot - Red, White, Blue	Gold Mirror	Ultra-dura	603390111013
S3600	Mercury Red	Clear	Ultra-dura	603390122224
S3600X	Mercury Red	Clear	Uvextreme	603390122231
S3601	Mercury Red	Espresso	Ultra-dura	603390122248
S3601X	Mercury Red	Espresso	Uvextreme	603390122255
S3602	Mercury Red	Amber	Ultra-dura	603390122262
S3603	Mercury Red	Gold Mirror	Ultra-dura	603390122279
S3604	Mercury Red	SCT-Reflect 50	Ultra-dura	603390122286

REPLACEMENT LENSES

ITEM #	LENS TINT	LENS COATING	UPC CODE
S6900	Clear	Ultra-dura	603390089343
S6900D	Clear	Dura-streme	603390122927
S6900X	Clear	Uvextreme	603390089350
S6901	Espresso	Ultra-dura	603390089367
S6901X	Espresso	Uvextreme	603390089374
S6902	Amber	Ultra-dura	603390089381
S6902X	Amber	Uvextreme	603390102844
S6903	Gold Mirror	Ultra-dura	603390089398
S6904	SCT-Reflect 50	Ultra-dura	603390089404
S6905X	SCT-Gray	Uvextreme	603390095030
S6906	Shade 2.0 Infra-dura	Ultra-dura	603390095047
S6907	Shade 3.0 Infra-dura	Ultra-dura	603390095054
S6908	Shade 5.0 Infra-dura	Ultra-dura	603390095061
S6909	SCT-Low IR	Ultra-dura	603390095153
S6910X	SCT-Vermilion	Uvextreme	603390095160
S6911X	SCT-Blue	Uvextreme	603390095177
S6912X	Dark Gray	Uvextreme	603390100277
S6913X	50% Gray	Uvextreme	603390106934

Packaging Information (Eyewear):
 Ind. Box, 10/Stock, 200/Master Case
 Master Case Weight: 32 pounds
 Master Case Dimensions: 29" x 15" x 24"

Packaging Information (Replacement Lenses):
 Ind. Polybag, 10/Box, 200/Master Case
 Master Case Weight: 11 pounds
 Master Case Dimensions: 18" x 13 1/4" x 10"

Genesis XC™

The all-in-one solution in protective eyewear, Genesis XC eyewear sets the standard for extra coverage and extra comfort on the job. Its design extends protection and offers more than 180° of peripheral coverage. Additionally, its ergonomically balanced MMT — Multi-Material Technology® frame provides exceptional all-day comfort. With the Rx lens insert, it offers an alternative for workers requiring vision correction. It holds Rx lenses snugly inside the comfortable Genesis XC eyewear, shielding expensive prescription lenses from damage. The Genesis XC provides all-day comfort and coverage, and especially for prescription lens wearers, nothing protects like Genesis XC with the Rx lens insert.



Ratcheting temples permit the lenses to be tilted away from the cheeks and allow wearer to modify the angle, ensuring customized fit and comfort.



Soft, flexible nose fingers conform to fit a variety of nasal profiles.

High Performance Protection

- Extended wrap-around lens for extra cheek and extra side coverage (up to 20% more than the standard Genesis® lens).
- Available with Dura-streme™ dual coating technology which combines our two best lens coatings — Uvextreme® anti-fog on the interior and Ultra-dura® anti-scratch on the exterior — for 3x longer lens life*.
- Offers highest available impact protection. Meets ANSI Z87.1-2003 (High Impact) and military V₀ ballistic impact test (protection against impact energies 7x higher than ANSI requirements).
- Certified to meet CSA Z94.3 standards.
- Available in a wide range of lens tints to address the needs of a variety of work environments.

Superior Comfort & Fit

- Soft elastomer browguard diffuses and deflects impact while providing comfort at all contact points.



Cushioned temples for non-slip fit and all-day comfort. Adjustable temple length allows individual worker customization for added comfort.



Extended 9-base wrap-around lens provides up to 20% more coverage around the eyes and cheeks than the standard Genesis® lens.

- Soft flexible fingers on the nose piece adjust and conform to almost any nasal profile to reduce slippage.
- Adjustable, ratcheting temples allow customized lens inclination and fit.
- Cushioned temple tips offer all-day comfort.

Product Platform Advantages & Value

- Economical and easy lens replacement system allows for multiple lens tints and extends the life of the eyewear.
- Optional Rx lens insert holds prescription lenses securely, and accommodates a variety of Rx needs, including bifocals, trifocals and progressive lenses. With a classic screw closure, it easily fits prescriptions ranging from +3.0 to -3.0 D and offers an economical option for workers who require vision correction.
- Multiple models in a family offers standardization while offering workers choice.
- Lifetime frame guarantee.

EYEWEAR

ITEM #	FRAME COLOR	LENS TINT	LENS COATING	UPC CODE
S3300	Black	Clear	Ultra-dura	603390113826
S3300-ADV	Black w/Advanced TPE	Clear	Ultra-dura	603390113412
S3300D	Black	Clear	Dura-streme	603390122866
S3300X	Black	Clear	Uvextreme	603390113833
S3300X-ADV	Black w/Advanced TPE	Clear	Uvextreme	603390122972
S3301	Black	Gray	Ultra-dura	603390113840
S3301X	Black	Gray	Uvextreme	603390113857
S3302	Black	SCT-Reflect 50	Ultra-dura	603390113864
S3303X	Black	SCT-Gray	Uvextreme	603390113871
S3304X	Black	SCT-Low IR	Uvextreme	603390113888
S3305	Black	Shade 2.0 Infra-dura	Ultra-dura	603390113895
S3306	Black	Shade 3.0 Infra-dura	Ultra-dura	603390113901
S3307	Black	Shade 5.0 Infra-dura	Ultra-dura	603390113918
S3308	Black	Silver Mirror	Ultra-dura	603390113970
S3309	Black	Amber	Ultra-dura	603390114991
S3310X	Black	50% Gray	Uvextreme	603390116124
S3311X	Black	SCT-Vermilion	Uvextreme	603390116803
S3312X	Black	SCT-Blue	Uvextreme	603390116810

REPLACEMENT LENSES

ITEM #	LENS TINT	LENS COATING	UPC CODE
S6950	Clear	Ultra-dura	603390113987
6950D	Clear	Dura-streme	603390122934
S6950X	Clear	Uvextreme	603390113994
S6951	Gray	Ultra-dura	603390114007
S6951X	Gray	Uvextreme	603390114014
S6952	SCT-Reflect 50	Ultra-dura	603390114021
S6953X	SCT-Gray	Uvextreme	603390114038
S6954X	SCT-Low IR	Uvextreme	603390114045
S6955	Shade 2.0	Ultra-dura	603390114052
S6956	Shade 3.0	Ultra-dura	603390114069
S6957	Shade 5.0	Ultra-dura	603390114076
S6958	Mirror	Ultra-dura	603390114083
S6959	Amber	Ultra-dura	603390115004
S6960X	50% Gray	Uvextreme	603390116131
S6961X	SCT-Vermilion	Uvextreme	603390116827
S6962X	SCT-Blue	Uvextreme	603390116834

RX INSERT

ITEM #	DESCRIPTION	UPC CODE
S3350	Genesis XC Rx Insert	603390114885
S3351	Pattern for Rx Insert	603390117299

Packaging Information (Eyewear):
Ind. Box, 10/Stock, 200/Master Case
Master Case Weight: 33 pounds
Master Case Dimensions: 29" x 15" x 24"

Packaging Information (Replacement Lenses):
Ind. Polybag, 10/Box, 200/Master Case
Master Case Weight: 11 pounds
Master Case Dimensions: 18" x 13 1/4" x 10"


Packaging information (Rx Insert):
Ind. Box, 10/Stock

Genesis X2™

Built with MMT— Multi-Material Technology® and engineered for comfort and protection, the Genesis X2 delivers all-day comfort and performance infused with aggressive, sports-inspired styling. With the Genesis Family we've made it easier to fit more workers with the best selling safety eyewear in the world. More style. More choice. More compliance.



Three position ratchet lens inclination adjusts to complete the fitting system and provides unsurpassed extended wear comfort.

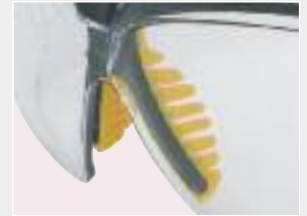

Soft, flexible nose fingers conform to fit a variety of nasal profiles.

High Performance Protection

- Wrap-around 9-base uni-lens style for uncompromised peripheral vision and superior coverage.
- Available with Dura-streme™ dual coating technology which combines our two best lens coatings — Uvextreme® anti-fog on the interior and Ultra-dura® anti-scratch on the exterior — for 3x longer lens life.*
- Offers highest available impact protection. Meets ANSI Z87.1-2003 (High Impact) and military V₀ ballistic impact test (protection against impact energies 7x higher than ANSI requirements).
- Available in a wide range of lens tints to address the needs of a variety of work environments.



A unique ventilation channel, between the frame and lens, vents the eye socket area to deliver an outstanding level of moisture and fog control.



Aggressive lens design adds sport-inspired styling.

Superior Comfort & Fit

- Soft elastomer browguard diffuses and deflects impact while providing comfort at all contact points.
- Soft flexible fingers on the nose piece adjust and conform to almost any nasal profile to reduce slippage.
- Ratcheting temples allow customized lens inclination.

Product Platform Advantages & Value

- Economical and easy lens replacement system allows for multiple lens tints and extends the life of the eyewear.
- Multiple models in a family offers standardization while offering workers choice.
- Lifetime frame guarantee.

EYEWEAR

ITEM #	FRAME COLOR	LENS TINT	LENS COATING	UPC CODE
S3520	Black & Yellow	Clear	Ultra-dura	603390122330
S3520D	Black & Yellow	Clear	Dura-streme	603390122897
S3520X	Black & Yellow	Clear	Uvextreme	603390122347
S3520-ADV	Black & Yellow w/Advanced TPE	Clear	Ultra-dura	603390123429
S3520X-ADV	Black & Yellow w/Advanced TPE	Clear	Uvextreme	603390122989
S3521	Black & Yellow	Espresso	Ultra-dura	603390122354
S3521X	Black & Yellow	Espresso	Uvextreme	603390122361
S3522	Black & Yellow	Amber	Ultra-dura	603390122378
S3523	Black & Yellow	Gold Mirror	Ultra-dura	603390122385
S3524	Black & Yellow	SCT-Reflect 50	Ultra-dura	603390122392
S3530X	Black & Yellow	SCT-Vermilion	Uvextreme	603390122408
S3531X	Black & Yellow	SCT-Blue	Uvextreme	603390122415
S3532X	Black & Yellow	Dark Gray	Uvextreme	603390122422
S3533X	Black & Yellow	50% Gray	Uvextreme	603390122439
S3500	Silver & Navy	Clear	Ultra-dura	603390122064
S3500X	Silver & Navy	Clear	Uvextreme	603390122071
S3501	Silver & Navy	Espresso	Ultra-dura	603390122088
S3501X	Silver & Navy	Espresso	Uvextreme	603390122095
S3502	Silver & Navy	Amber	Ultra-dura	603390122101
S3503	Silver & Navy	Gold Mirror	Ultra-dura	603390122118
S3504	Silver & Navy	SCT-Reflect 50	Ultra-dura	603390122125
S3510X	Silver & Navy	SCT-Vermilion	Uvextreme	603390122187
S3511X	Silver & Navy	SCT-Blue	Uvextreme	603390122194
S3512X	Silver & Navy	Dark Gray	Uvextreme	603390122200
S3513X	Silver & Navy	50% Gray	Uvextreme	603390122217

REPLACEMENT LENSES

ITEM #	LENS TINT	LENS COATING	UPC CODE
S6920	Clear	Ultra-dura	603390122729
S6920D	Clear	Dura-streme	603390122910
S6920X	Clear	Uvextreme	603390122736
S6921	Espresso	Ultra-dura	603390122743
S6921X	Espresso	Uvextreme	603390122750
S6922	Amber	Ultra-dura	603390122767
S6923	Gold Mirror	Ultra-dura	603390122774
S6924	SCT-Reflect 50	Ultra-dura	603390122781
S6926X	SCT-Vermilion	Uvextreme	603390122798
S6927X	SCT-Blue	Uvextreme	603390122804
S6928X	Dark Gray	Uvextreme	603390122811
S6929X	50% Gray	Uvextreme	603390122828

Packaging Information (Eyewear):
 Ind. Box, 10/Stock, 200/Master Case
 Master Case Weight: 32 pounds
 Master Case Dimensions: 29" x 15" x 24"

Packaging Information (Replacement Lenses):
 Ind. Polybag, 10/Box, 200/Master Case
 Master Case Weight: 11 pounds
 Master Case Dimensions: 18" x 13 1/4" x 10"

Genesis® S (Slim)

The Genesis S (Slim) is the latest addition to the number one selling eyewear family on the market today. Adding to the comfort, performance and style of the Genesis family, the Genesis S (Slim) offers a 6% smaller frame for workers with slimmer facial profiles. Once again, we've made it easier to fit more workers with the best selling safety eyewear in the world. More faces. More choices. More compliance.



Ventilation channel between the frame and lens vents the eye socket area to deliver an outstanding level of moisture and fog control.



Ratcheting temples adjust inclination to allow customized fit.

High Performance

- Wrap-around, 9-base uni-lens style for uncompromised peripheral vision and coverage.
- Available with Dura-streme™ dual coating technology which combines our two best lens coatings — Uvextreme® anti-fog on the interior and Ultra-dura® anti-scratch on the exterior — for 3x longer lens life*.
- Offers highest available impact protection. Meets ANSI Z87.1-2003 (High Impact) and military V₀ ballistic impact test (protection against impact energies 7x higher than ANSI requirements).
- Certified to meet CSA Z94.3 standards.
- Available in Clear, Amber, Gray, Dark Gray, and SCT-Reflect 50 lens tints.

ORDERING INFORMATION



Easy lens replacement system and task-specific tints provide flexibility and value.



Soft, flexible nose fingers for a comfortable fit and reduced slippage.

Superior Comfort & Fit

- Frame and lens are 6% smaller than Genesis® to fit slimmer facial profiles.
- Soft brow guard absorbs and diffuses impact energy.
- Soft, flexible “fingers” on nosepiece conform to a variety of facial profiles and minimize slippage.
- Padded temple and tips provides all-day comfort.

Product Platform Advantages & Value

- Economical and easy lens replacement system allows for multiple lens tints and extends the life of the eyewear.
- Multiple models in a family offers standardization while offering workers choice.
- Lifetime frame guarantee.

EYEWEAR

ITEM #	FRAME COLOR	LENS TINT	LENS COATING	UPC CODE
S3700	Pewter/Black	Clear	Ultra-dura	603390123818
S3700X	Pewter/Black	Clear	Uvextreme	603390123825
S3700D	Pewter/Black	Clear	Dura-streme	603390123832
S3701	Pewter/Black	Gray	Ultra-dura	603390123849
S3701X	Pewter/Black	Gray	Uvextreme	603390123856
S3702	Pewter/Black	Amber	Ultra-dura	603390123863
S3702X	Pewter/Black	Amber	Uvextreme	603390123870
S3703	Pewter/Black	SCT-Reflect 50	Ultra-dura	603390123887
S3704	Pewter/Black	Dark Gray	Ultra-dura	603390123894
S3720	Ice Blue/Gray	Clear	Ultra-dura	603390124693
S3720X	Ice Blue/Gray	Clear	Uvextreme	603390124709
S3720D	Ice Blue/Gray	Clear	Dura-streme	603390124716
S3721	Ice Blue/Gray	Gray	Ultra-dura	603390124723
3721X	Ice Blue/Gray	Gray	Uvextreme	603390124730
S3722	Ice Blue/Gray	Amber	Ultra-dura	603390124747
S3722X	Ice Blue/Gray	Amber	Uvextreme	603390124754
S3723	Ice Blue/Gray	SCT-Reflect 50	Ultra-dura	603390124761
S3724	Ice Blue/Gray	Dark Gray	Ultra-dura	603390124778

REPLACEMENT LENSES

ITEM #	LENS TINT	LENS COATING	UPC CODE
S6610	Clear	Ultra-dura	603390123955
S6610X	Clear	Uvextreme	603390123962
S6610D	Clear	Dura-streme	603390123979
S6611	Gray	Ultra-dura	603390123986
S6611X	Gray	Uvextreme	603390123993
S6612	Amber	Ultra-dura	603390124006
S6612X	Amber	Uvextreme	603390124013
S6613	SCT-Reflect 50	Ultra-dura	603390124020
S6614	Dark Gray	Ultra-dura	603390124037

Packaging Information (Eyewear):
Ind. Box, 10/Stock, 200/Master Case
Master Case Weight: 32 pounds
Master Case Dimensions: 29" x 15" x 24"

Packaging Information (Replacement Lenses):
Ind. Polybag, 10/Box, 200/Master Case
Master Case Weight: 11 pounds
Master Case Dimensions: 18" x 13 1/4" x 10"

Genesis[®] READING MAGNIFIERS

Genesis — the number one selling premium eyewear on the market — continues to expand its product platform with the Genesis Reading Magnifiers. Genesis Reading Magnifiers offer the best in comfort, protection and style as well as an extensive range of five magnification strengths. These reading magnifiers are an excellent choice for workers needing increased magnification for close-up inspection, fine detail work and reading smaller print. With the new reading magnifiers, the Genesis family continues to be a highly versatile line of safety eyewear that combines the simplicity of standardization with the ability to meet worker's individual needs.



Highest available impact protection as one of the only reading magnifier models certified to ANSI, CSA and Military V₀ Ballistic Test for Impact.

Replaceable lenses and the ability to swap among Genesis models provide exceptional TCO value.

Premier Performance

- Available with Ultra-dura[®] Anti-Scratch coating and five diopter strengths from +1.0 to +3.0 magnifications.
- Available in Clear, Amber, Standard Gray and SCT-Reflect 50 tints.
- Meets ANSI Z87.1-2003 (High Impact).
- Certified to meet CSA Z94.3 standards.
- Multiple models in the Genesis family offer the ability to standardize on a product family while still offering workers eyewear choices.

Superior Comfort & Fit

- Soft, flexible nasal fingers conform to a variety of facial profiles and minimize slippage.

ORDERING INFORMATION



Wide range of magnification strengths offered with five different diopters.



Premier all-day comfort with soft, high-quality elastomer nasal fingers, padded browbar and temple tips.

- Padded temple tips and cushioned browbar provide all-day comfort and diffuse and deflect impact energy.
- Adjustable temple length and ratcheting lens inclination adjustment offer a secure, customized fit.

Exceptional Total-Cost-of-Ownership (TCO) Value

- Easy and economical lens replacement system allows for multiple lens tints and extends the life of the eyewear.
- Lenses are interchangeable among models to reduce overall eyewear inventory and lowers costs. Genesis Reading Magnifier lenses can be used in the following frames: Genesis, Genesis XC™ and Genesis X2™ models.
- Lifetime frame guarantee.

EYEWEAR

ITEM #	LENS TINT	FRAME	LENS COATING	MAGNIFICATION	UPC CODE
S3760	Clear	Black	Ultra-dura Anti-Scratch	+1.0	603390124327
S3761	Clear	Black	Ultra-dura Anti-Scratch	+1.5	603390124242
S3762	Clear	Black	Ultra-dura Anti-Scratch	+2.0	603390124068
S3763	Clear	Black	Ultra-dura Anti-Scratch	+2.5	603390124396
S3764	Clear	Black	Ultra-dura Anti-Scratch	+3.0	603390124419
S3765	Amber	Black	Ultra-dura Anti-Scratch	+1.0	603390124341
S3766	Amber	Black	Ultra-dura Anti-Scratch	+1.5	603390124266
S3767	Amber	Black	Ultra-dura Anti-Scratch	+2.0	603390124280
S3768	Amber	Black	Ultra-dura Anti-Scratch	+2.5	603390124433
S3769	Amber	Black	Ultra-dura Anti-Scratch	+3.0	603390124457
S3770	Standard Gray	Black	Ultra-dura Anti-Scratch	+1.0	603390124631
S3771	Standard Gray	Black	Ultra-dura Anti-Scratch	+1.5	603390124648
S3772	Standard Gray	Black	Ultra-dura Anti-Scratch	+2.0	603390124655
S3773	Standard Gray	Black	Ultra-dura Anti-Scratch	+2.5	603390124662
S3774	Standard Gray	Black	Ultra-dura Anti-Scratch	+3.0	603390124679
S3775	SCT-Reflect 50	Black	Ultra-dura Anti-Scratch	+1.0	603390124372
S3776	SCT-Reflect 50	Black	Ultra-dura Anti-Scratch	+1.5	603390124303
S3777	SCT-Reflect 50	Black	Ultra-dura Anti-Scratch	+2.0	603390124082
S3778	SCT-Reflect 50	Black	Ultra-dura Anti-Scratch	+2.5	603390124495
S3779	SCT-Reflect 50	Black	Ultra-dura Anti-Scratch	+3.0	603390124501

REPLACEMENT LENSES

ITEM #	LENS TINT	LENS COATING	MAGNIFICATION	UPC CODE
S6710	Clear	Ultra-dura Anti-Scratch	+1.0	603390124532
S6711	Clear	Ultra-dura Anti-Scratch	+1.5	603390124549
S6712	Clear	Ultra-dura Anti-Scratch	+2.0	603390124129
S6713	Clear	Ultra-dura Anti-Scratch	+2.5	603390124556
S6714	Clear	Ultra-dura Anti-Scratch	+3.0	603390124563

Packaging Information (Eyewear):
 Ind. Box, 10/Stock, 200/Master Case
 Master Case Weight: 32 pounds
 Master Case Dimensions: 29" x 15" x 24"

Packaging Information (Replacement Lenses):
 Ind. Polybag, 10/Box, 200/Master Case
 Master Case Weight: 11 pounds
 Master Case Dimensions: 18" x 13 1/4" x 10"










































Diopter Chart

Hold chart 14 inches from face to figure diopter strength	Diopter
If this line is difficult to read, use	+1.5
If this line is difficult to read, use	+2.0
If this line is difficult to read, use	+2.5

Genesis® Family

All Uvex® lenses offer 99.9% ultra-violet protection.

SAFETY EYEWEAR

	GENESIS®	GENESIS X2™	GENESIS XC™	GENESIS® S (Slim)	GENESIS® READERS
Clear Used for most indoor work applications					
Amber For low-light applications where enhanced contrast is needed					
SCT-Vermilion For indoor applications where contrast is needed, such as inspection					
SCT-Blue Applications with high levels of sodium vapor lighting					
SCT-Reflect 50 Light mirror coating for varying light conditions					
50% Gray Minimizes outdoor sunlight and glare					
Gray Minimizes outdoor sunlight and glare					
Standard Gray Minimizes strong outdoor sunlight and glare					
Dark Gray Minimizes eye fatigue due to outdoor sunlight and glare					
Gold Mirror Deflects sunlight and glare					
Espresso Minimizes strong outdoor sunlight and glare					
SCT-Gray Minimizes outdoor glare and offers true color recognition					
SCT-Low IR When peripheral IR protection is required					
Infra-dura® Welding Available in shades 2.0, 3.0 and 5.0 for welding, brazing and cutting					
Silver Mirror Deflects sunlight and glare					



FOR MORE INFORMATION, CONTACT:
Sperian Protection Americas, Inc.
 900 Douglas Pike
 Smithfield, RI 02917-1874
 (800) 430-5490
www.uvex.us

Uvextreme® anti-fog coating performs under the most extreme conditions and will not wear off after repeated cleanings. It is permanently bonded to the lens and retains anti-scratch, anti-static and UV protection properties. Ultra-dura® hard coat is permanently bonded to the lens and is scratch-resistant and chemical-resistant. Uvex Dura-streme™ lenses combine our two best lens coatings on one lens: Ultra-dura on the exterior and Uvextreme on the interior to provide up to 3x* more lens life. Advanced TPE formulation performs exceptionally well in environments where chemical mist, cutting oils and high moisture are present.

*Comparative lens life test performed using a Bayer Abrasion Test method and may vary between environment and application.